

Absolute Process Instruments

api-usa.com © 03-22

Instructions

Precautions

WARNING! All wiring must be performed by a gualified electrician or instrumentation engineer. See diagram for terminal designations and wiring examples. Consult factory for assistance.

WARNING! Avoid shock hazards! Turn signal input, output, and power off before connecting or disconnecting wiring, or removing or installing module.

Précautions

ATTENTION! Tout le câblage doit être effectué par un électricien ou ingénieur en instrumentation qualifié. Voir le diagramme pour désignations des bornes et des exemples de câblage. Consulter l'usine pour assistance.

ATTENTION! Éviter les risques de choc! Fermez le signal d'entrée, le signal de sortie et l'alimentation électrique avant de connecter ou de déconnecter le câblage, ou de retirer ou d'installer le module.

API maintains a constant effort to upgrade and improve its products. Specifications are subject to change without notice. See api-usa.com for latest product information. Consult factory for your specific requirements.

WARNING: This product can expose you to chemicals includ-ing nickel, which is known to the State of California to cause cancer or birth defects or other reproductive harm. For more nformation go to www.P65Warnings.ca.gov

Electrical Connections

Polarity must be observed for signal wiring connections. If the input and/or output do not function, check wiring and polarity. Each product is factory configured to your exact input and output ranges as indicated on the serial number label.

Outputs

For milliamp ranges determine if your devices provide power to the current loop or if the loop must be powered by the APD module. Typical voltage may be 9-24 VDC at your device's terminals if it provides power to the loop.

Device for Output Channel 1	Terminal	Terminal
Voltage input device.	3 (–)	4 (+)
Unpowered or passive mA input device. APD module provides the loop power.	3 (-)	4 (+20 V)
mA input device powers the current loop.	2 (-)	3 (+)
Device for Output Channel 2	Terminal	Terminal
Device for Output Channel 2 Voltage input device.	Terminal 7 (–)	Terminal 8 (+)

Input 1, Bridge, Strain Gauge, Load Cell

Refer to wiring diagram at right and strain gauge manufacturer's data sheet for wiring and color-coding. Polarity must be observed when connecting input. Sensor shield wire (if equipped) should be grounded at one end only.

The excitation voltage is factory set and should match the sensor manufacturer's recommendations. A front potentiometer allows approximately ±10% fine adjustment of the excitation voltage

CAUTION: Never short the excitation leads together. This will cause internal damage to the module.

Bridge Input Channel 1	 Terminal 	+ Terminal
Strain gauge signal input	17 (+)	19 (–)
Excitation voltage	18 (-)	20 <mark>(+)</mark>

Input 2, Bridge, Strain Gauge, Load Cell

Refer to wiring diagram at right and strain gauge manufacturer's data sheet for wiring and color-coding. Polarity must be observed when connecting input. Sensor shield wire (if equipped) should be grounded at one end only.

The excitation voltage is factory set and should match the sensor manufacturer's recommendations. A front potentiometer allows approximately ±10% fine adjustment of the excitation voltage

CAUTION: Never short the excitation leads together. This will cause internal damage to the module.

Bridge Input Channel 2	– Terminal	+ Terminal
Strain gauge signal input	21 (+)	23 (-)
Excitation voltage	22 (-)	24 (+)

Module Power Terminals

Check label for module operating voltage to make sure it matches available power. The power supplies are fuse protected and the unit may be returned to API for fuse replacement. When using DC power, either polarity is acceptable, but for consistency, wire positive (+) to terminal 25 and negative (-) to terminal 28.

Mounting to a DIN Rail

Install module vertically on a 35 mm DIN rail in a protective enclosure away from heat sources. Do not block air flow. Allow 1" (25 mm) above and below housing vents for air circulation.

- 1. Tilt front of module down and position the lower spring clips against the bottom edge of DIN rail.
- 2. Push front of module upward until upper mount snaps into place.
- Removal

Avoid shock hazards! Turn signal input, output, and power off.

- 1. Push up on bottom back of module.
- 2. Tilt front of module downward to release upper mount from top edge of DIN rail.
- 3. The module can now be removed from the DIN rail.

Calibration

Input and output ranges are factory pre-configured (at 24°C ±1°C). Front-mounted Zero and Span potentiometers for each channel can be used to compensate for load and lead variations

- 1. Apply power to the module and allow a minimum 30 minute warm up time.
- 2. Using an accurate voltmeter on terminals 18 and 20, and then 22 and 24, adjust the excitation voltage fine adjustment potentiometers to the strain gauge manufacturer's recommended values.
- 3. Using an accurate calibration source, provide an input to the module equal to the minimum input required for the application.
- 4. Using an accurate measurement device for the output, adjust the Zero potentiometer for the exact minimum output desired. The Zero control should only be adjusted when the input signal is at its minimum. This will produce the corresponding minimum output signal. For example: 4 mA for a 4-20 mA output or -10 V for a ±10 V output.
- 5. Set the input at maximum, and then adjust the Span pot for the exact maximum output desired. The Span control should only be adjusted when the input signal is at its maximum. This will produce the corresponding maximum output signal. Example: for 4-20 mA output, the Span control will provide adjustment for the 20 mA or high end of the signal.
- 6. Repeat adjustments for both channels for maximum accuracy.

Output Test Function

When the Test button is depressed it will drive the output with a known good signal that can be used as a diagnostic aid during initial start-up or troubleshooting. When released, the output will return to normal.

Each Test Cal. potentiometer is factory set to approximately 50% output. Each can be adjusted to set the test output from 0 to 100% of the output span. Press and hold the Test button and adjust the corresponding Test Cal. potentiometer for the desired output level.

They may optionally be externally wired for remote test operation or a manual override. See wiring diagram at right.

Operation

The APD 2055 accepts two stain gauge inputs and provides two optically isolated DC voltage or current outputs that are linearly related to the inputs.


Green LoopTracker® input LEDs provide a visual indication that each signal is being sensed by the input circuitry of the module. They also indicates the input signal strength by changing in intensity as the process changes from minimum to maximum.

If an LED fails to illuminate, or fails to change in intensity as the process changes, check the module power or signal input wiring.


Two red LoopTracker output LEDs provide a visual indication that the output signals are functioning. They become brighter as the input and each corresponding output change from minimum to maximum.


For a current output the red LED will only light if the output loop current path is complete. For either current or voltage outputs, failure to illuminate or a failure to change in intensity as the process changes may indicate a problem with the module power or signal output wiring. Note that it may be difficult to see the LEDs under bright lighting conditions.



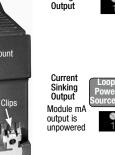


Voltage

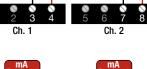

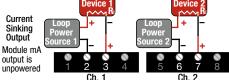



Device

1

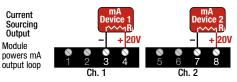



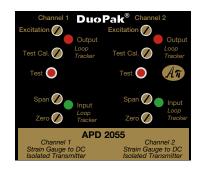

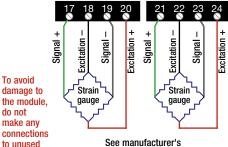

specifications for wiring designations. Shield wires should be arounded at one end only.



To maintain full isolation avoid combining power supplies in common with inputs, outputs, or unit power

> Wire terminal torque 0.5 to 0.6 Nm or 4.4 to 5.3 in-lbs



do not

terminals

APD 2055